


“VRS” Unloader Valve

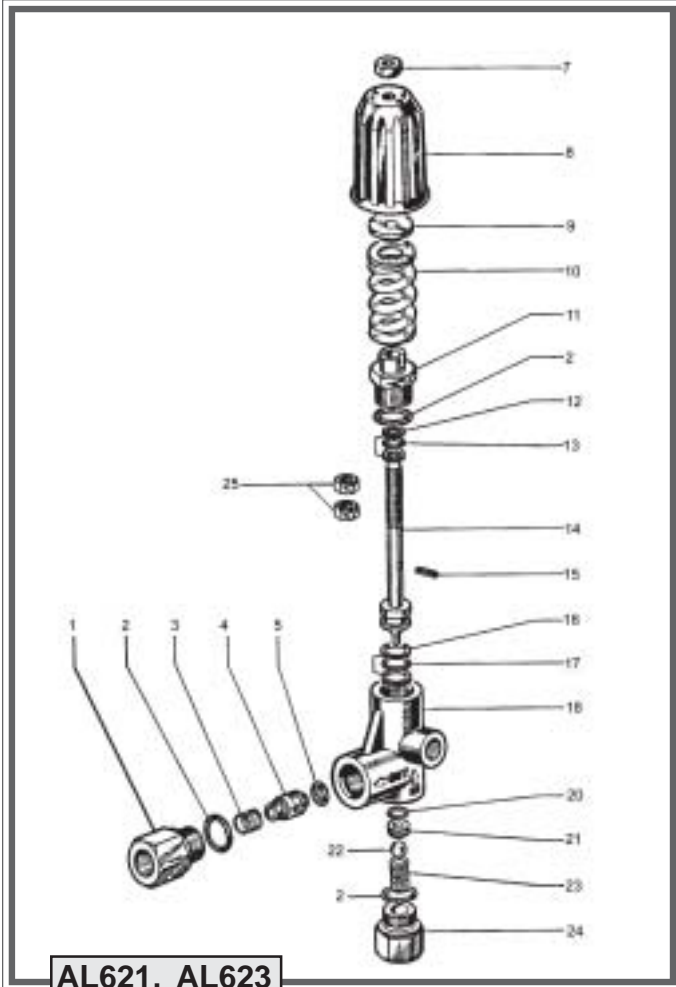


AL621, AL623

POS	CODE	QTY	DESCRIPTION
1	005-150010	1	3/8 FEM. GAS check connector
	005-150087	1	3/8 FEM. NPT check connector
2	005-060108	3	O-ring 2068 70SH
3	005-100002	1	Shutter spring
4	005-120000	1	Shutter
5	005-060109	1	O-ring 6312 90SH
7	005-030101	1	M8 lock nut
8	005-400300	1	Knob
9	005-150101	1	Washer
10	005-400400	1	1450 psi spring (yellow)
	005-400401	1	2900 psi spring (red)
11	005-150011	1	Stem guide union
12	005-000102	2	Back-up ring
13	005-060106	1	O-ring 2031 70SH
14	030-160515	1	Stem
15	005-160301	1	ø 3 x 12 mm spring pin
16	030-000125	2	Back-up ring
17	102-060115	1	O-ring 3043 70SH
18	009-020028	1	3/8 FEM. GAS body
20	001-060129	1	O-ring 2043 90SH
21	001-160200	1	ø 7 seat
22	001-160008	1	ø 11/32 ball
23	005-100003	1	Ball spring
24	005-150009	1	3/8 FEM. GAS seat union
	005-150088	1	3/8 FEM. NPT seat union
25	005-030200	2	M8 nut
	005-650213	13	Repair kit

“VS25” Safety Valve

POS	CODE	QTY	DESCRIPTION
1	035-021101	1	Threaded sleeve M20 x 1
2	005-060108	2	O-ring 2068 70SH
3	035-020087	1	Body
5	017-160217	1	Seat
6	004-060113	2	O-ring 2031 viton
7	014-000123	1	Back-up ring
8	035-650417	1	Frame with ball
9	035-030603	1	Disk
10	035-400404	1	3650 psi spring
	035-400405	1	2900 psi spring
	035-400406	1	2175 psi spring
11	035-060033	1	Stop ring nut
12	035-100140	1	Knob
	035-650220	5	Repair kit

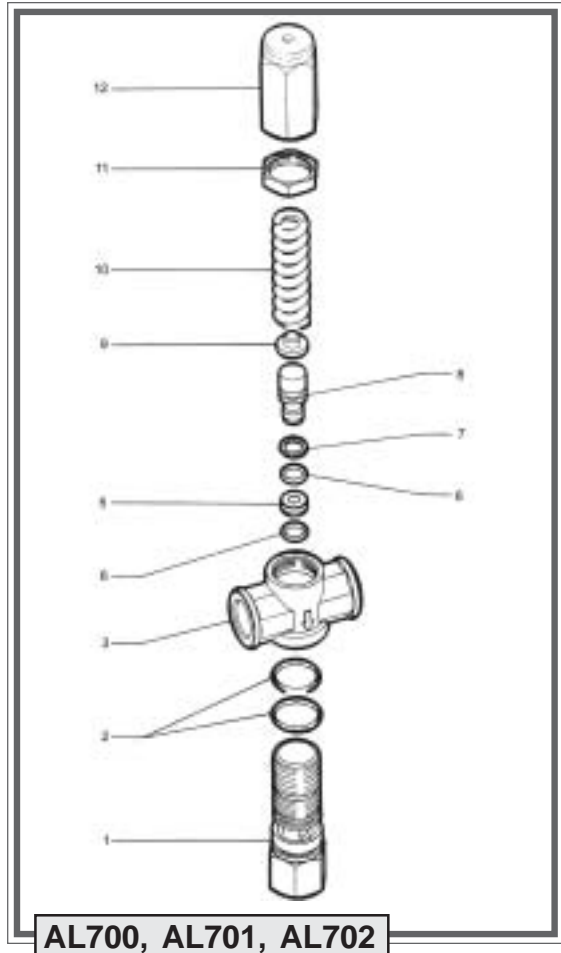

AL700, AL701, AL702