


HONDA PRO-PAK-4000

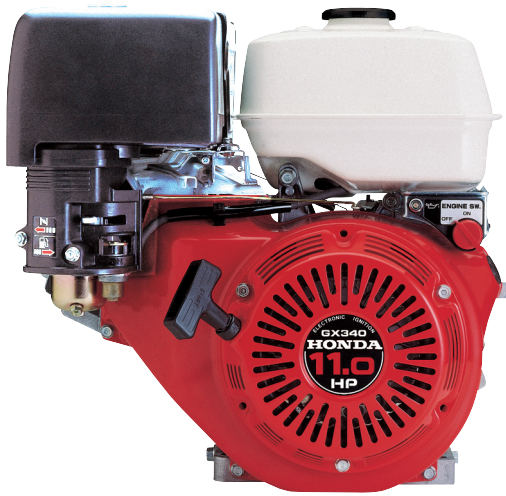

U-PAY \$1095.00

allow 4-days build & ship time

Honda 13 HP EZ4040G GENERAL 4 GPM & 4,000 PSI Pump

Pump is bolted to Engine.

Installed Loose*

Unloader, Water Filter, By-pass hose
Safety Pressure Relief, Gauge, 50' hose, Gun,
Lance, Nozzles & Quick Connects

* Everything else is put together and hand tightened so you will see where it goes. All you have to do is apply the teflon tape that is furnished and tighten each component in place. At that point just add Gas, Oil & Water and pull the rope and...

...go make some money!

KOHLER PRO-PAK-4000



U-PAY \$1295.00

allow 4-days build & ship time

KOHLER 14 HP RKV4G40 A-R 4 GPM & 4,000 PSI Pump

Pump is bolted to Engine.

Installed Loose*

Unloader, Water Filter, By-pass hose
Safety Pressure Relief, Gauge, 50' hose, Gun,
Lance, Nozzles & Quick Connects

* Everything else is put together and hand tightened so you will see where it goes. All you have to do is apply the teflon tape that is furnished and tighten each component in place. At that point just add Gas, Oil & Water and pull the rope and...

...go make some money!

Vanguard PRO-PAK-3500



U-PAY \$1595.00

allow 10-days build & ship time

VANGUARD 18 HP ELECTRIC START RKV5540 A-R 5.6 GPM & 3,500 PSI Pump

Pump is bolted to Engine.

Installed Loose*

Unloader, Water Filter, By-pass hose
Safety Pressure Relief, Gauge, 50' hose, Gun,
Lance, Nozzles & Quick Connects

* Everything else is put together and hand tightened so you will see where it goes. All you have to do is apply the teflon tape that is furnished and tighten each component in place. At that point just add Gas, Oil, Battery & Water and...

...go make some money!

KOHLER PRO-PAK-3500



U-PAY \$1795.00

allow 10-days build & ship time

KOHLER 18 HP ELECTRIC START RKV5540 A-R 5.6 GPM & 3,500 PSI Pump

Pump is bolted to Engine.

Installed Loose*

Unloader, Water Filter, By-pass hose
Safety Pressure Relief, Gauge, 50' hose, Gun,
Lance, Nozzles & Quick Connects

* Everything else is put together and hand tightened so you will see where it goes. All you have to do is apply the teflon tape that is furnished and tighten each component in place. At that point just add Gas, Oil, Battery & Water and...

...go make some money!